


SEED SLIDE ANTENNA WIRE UPDATE


Instructions to Increase Range of Remote Control

To all Seed Slide customers with 2-button or 4-button remotes. We have recently found that range of the VERSA2 or the VERSA7 remote is greatly affected by not having the antenna wire installed outside of the Seed Slide.

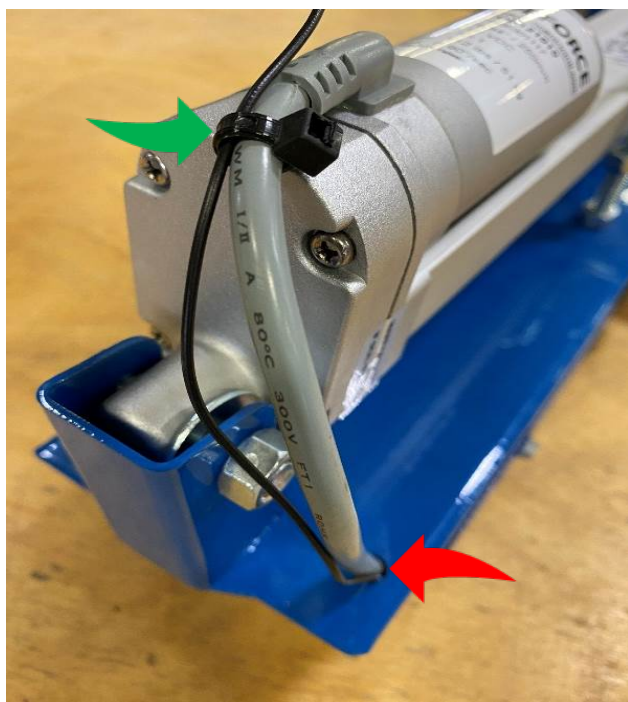

To increase the range of your Seed Slide please take off bottom cover and find the small black antenna wire that comes out of the VERSA2 or VERSA7 control box (it is about 8" in length). Push wire through hole (shown with red arrow) that the grey actuator wire comes out and zip tie as shown on the photo on the left. (shown with green arrow)

When re-installing bottom cover on a Seed Slide with a VERSA7 Controller (4 buttons on remote) **DO NOT** reinstall the screw shown with the black arrow on the photo to the right. It may damage the VERSA7 control box.

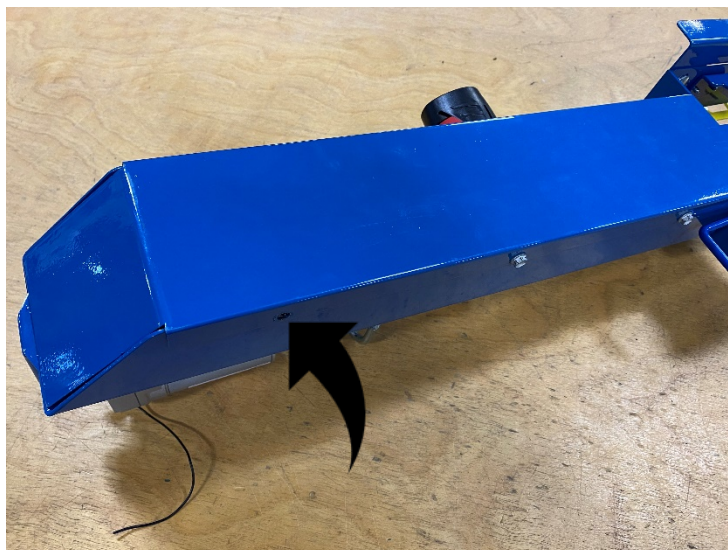

CONTACT US FOR MORE INFORMATION

20561 Justice Ave., Wabasso, MN 56293 Phone: (507) 342-2222 Fax: (507) 342-2223
 Email: sales@bulkseedsystems.com Website: www.bulkseedsystems.com